



Patriot Plate — USA —



Installation Instructions 4 Simple Steps

We hope you enjoy your Patriot Plate! Please follow the simple steps below. If you have any issues, you can check out our installation video on our website at: www.patriotplateusa.com, or send us an email at: makeit@patriotplateusa.com. Thank you for purchasing our Patriot Plate and spread the word!



Step 1 – inspect packet:

Take note of the accessories packet. This packet includes the items needed to add and remove the Patriot Plate from your spare tire mount.

- (2) – special spline tooth lug nuts.
- (2) – extended length lug nut adapters
- (2) – plate mount bolts
- (2) – plate bolt lock washers
- (1) – spline key for lug nuts
- (1) – allen wrench



Step 2 – install spline lug nuts:

Remove the top 2 lug nuts from your wheel and replace with the special spline lug nuts provided.

Tighten lug nuts. **Follow vehicle wheel torque specification, typically spare wheel differs from driving wheels.*




Step 3 – install lug nut extensions:

Now install the lug nut extensions by hand screwing onto the lug nuts. A snug hand tighten is all that is needed. They will not spin once the Patriot Plate is mounted.



Step 4: - install Patriot Plate!

Line up the Patriot Plate holes with the lug nut extensions. Install **lock washer** and bolt through the holes and into the lug nut extension. Use the provided allen wrench to tighten bolt nice and snug.

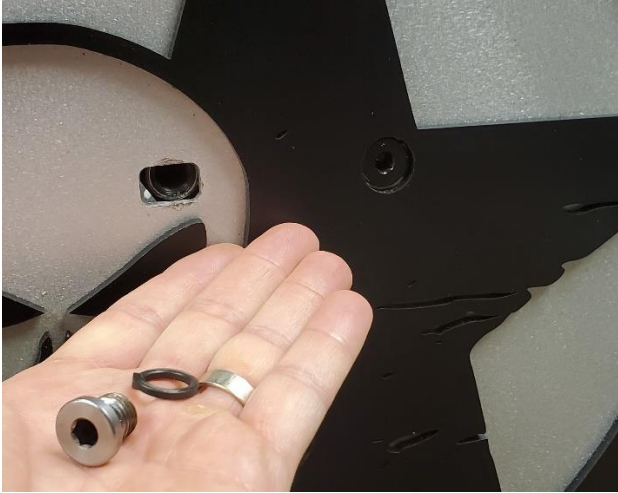

Thank you!